

Link: <https://help.nuvo.solutions/docs/about-gps-insight-driver-android-app/> Last Updated: July 10th, 2017

With the **GPS Insight Driver (Android app)**, drivers can assign and unassign themselves to/from a vehicle, record pre- and post-trip Driver Vehicle Inspection Reports (DVIRs), and send and receive messages to/from dispatch from their mobile Android devices.



Primary features include:

- 1) **DVIR** - Record pre-/post-trip DVIRs and view the most recent DVIR on the vehicle you are assigned.
- 2) **Driver Messaging** - Send and receive messages to/from dispatch.
- 3) **Driver Assign** - Assign/un-assign to/from a vehicle and view assign/unassign history.



Note. The image height shown on right is reduced for readability. Screen aspect ratios vary by device model.

Assign Vehicle

Type vehicle name here...



Assign


My Vehicle




Messages




Driver



Logging In to the App

The Driver App is only accessible to drivers with a valid phone number whose information has been previously entered in to the Portal.



Note. If a number is entered that is not associated with previously entered driver information, the driver will receive a message reading: “Bad Phone Number.” Drivers may be added to the Portal account at any time. See [Adding a Driver](#) for step-by-step instructions.

► How to log in to the App:

1. From the Login screen, enter your phone number and tap **Get Authorization Code**.



An authorization code is sent to the phone number entered via SMS message from 477-477(GPS-GPS).

2. Open the SMS message and retrieve the assigned authorization code.
3. Enter the authorization code in the text field and tap **Authorize**.



Note. The authorization code must be entered within 120 seconds from your authorization code request.

You are now logged in to the Driver App.

Logging Out of the App

If you are using the same mobile device, you are automatically logged in each time you open the App.

► How to log out of the App:


Link: <https://help.nuvo.solutions/docs/about-gps-insight-driver-android-app/> Last Updated: July 10th, 2017



1. Tap on the **Driver** icon () at the bottom right corner of the screen.

The Driver Info screen displays.

2. Tap your name.

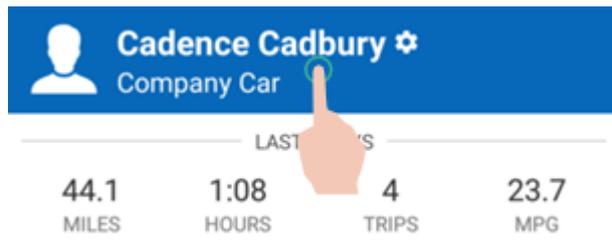

A window appears asking: "Logout of GPS Insight?"

3. Tap **Logout**.

UNASSIGN VEHICLE

LOGOUT



You are now logged out of the App.

Viewing Driver App Data

You can view submitted Driver Vehicle Inspection Reports (DVIR), average inspection times by driver, a real-time log of recently completed DVIRs, and receive notification when a DVIR with defects is submitted via supported reports, alerts, and dashlets in the Portal.

Data Type	Type Title(s)	Reference Article
Reports	-Driver Vehicle Inspection Report -Pre/Post Trip Inspection Report -Driver History	About Reports
Alerts	-DVIR -Driver Assign -Driver Login -Driver Status Alert	About Alerts
Dashlet	-DVIR	Dashlet Types

