


Link: <https://help.nuvo.solutions/docs/about-the-map-page/available-map-cards/using-the-vehicle-card/> Last Updated: May 9th, 2019


When you click on a vehicle/driver (if assigned) from the map or use the Search Field to locate a vehicle, the Vehicle Card for the selected vehicle/driver displays. With the Vehicle Card, you can see:

- Vehicle ID or name
- Driver (if associated/assigned)
- Address of last reported location
- Details (e.g., vehicle, status, driver, landmark, odometer, runtime, voltage (if reported), and more)
- Attributes (if applicable)
- Camera events (if applicable)
- Street view of last reported location

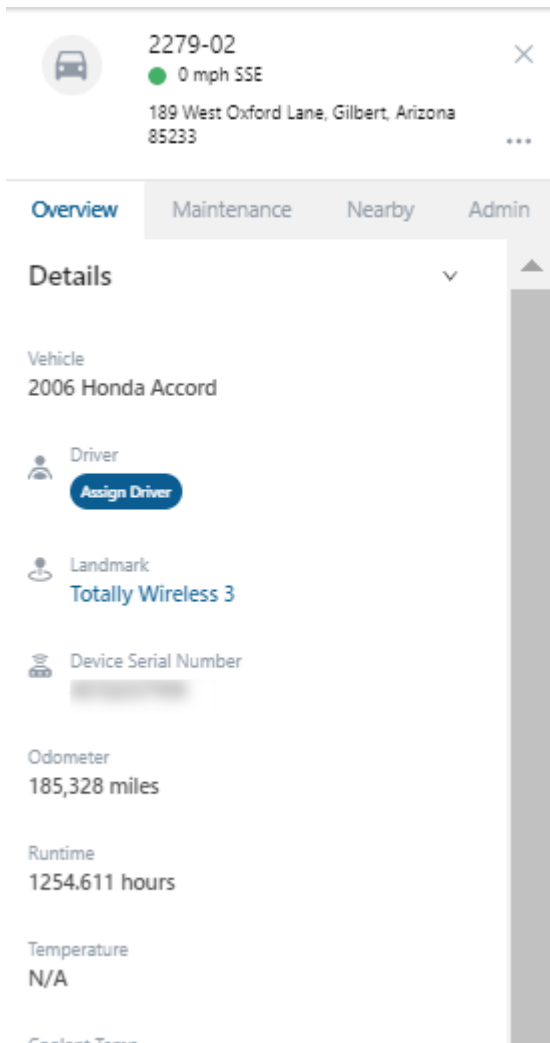

The screenshot displays the Vehicle Card interface. At the top, there is a header section with a car icon, the vehicle ID "2279-02", a status indicator (green dot) showing "0 mph SSE", and the address "189 West Oxford Lane, Gilbert, Arizona 85233". A close button (X) is in the top right corner. Below the header is a tabbed interface with four tabs: "Overview" (selected), "Maintenance", "Nearby", and "Admin". Under the "Overview" tab, there is a "Details" section with a dropdown arrow. The details are organized into sections: "Vehicle" (2006 Honda Accord), "Driver" (with an "Assign Driver" button), "Landmark" (Totally Wireless 3), "Device Serial Number" (blurred), "Odometer" (185,328 miles), "Runtime" (1254,611 hours), and "Temperature" (N/A). A "Contact Team" link is visible at the bottom left of the details section.


Using the Vehicle Card Header and Vehicle Card Status Bar, you can quickly manage and monitor individual vehicles in your fleet.



Note. The Driver feature is available with the Driver Management add-on. If you would like to learn more, please contact your Account Manager.

Vehicle Card Header


Using the Vehicle Card Header of the Vehicle Card, you can edit, follow, and/or isolate a vehicle, create a landmark, send a message or dispatch, copy location data, and view trip history directly from the card.

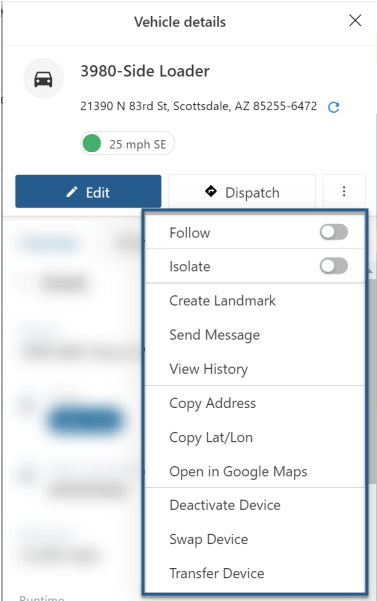

See [Vehicle Card Header](#) for step-by-step instructions on using the features available from the header.

Vehicle Card Status Bar

From the Status Bar, you can view a general overview of details pertaining to the selected vehicle, maintenance/service log information, nearby assets and landmarks, and Admin details.

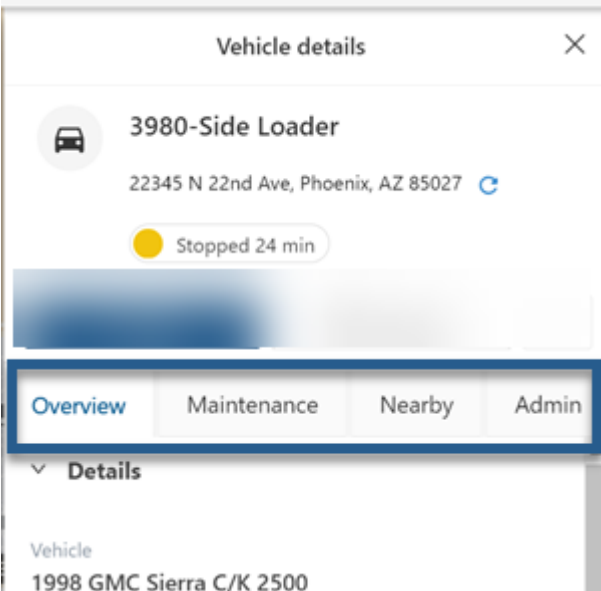

See **Vehicle Card Status Bar** for step-by-step instructions on using the features available from the status bar.