


Link: <https://help.nuvo.solutions/docs/about-vehicles/> Last Updated: February 7th, 2019


Need to see a newly installed device on the map? Car or truck not showing up? Check out the information below.

Click the **Vehicles** menu item to open the Vehicles tab. All of your vehicles and their color-coded statuses are listed on this tab.

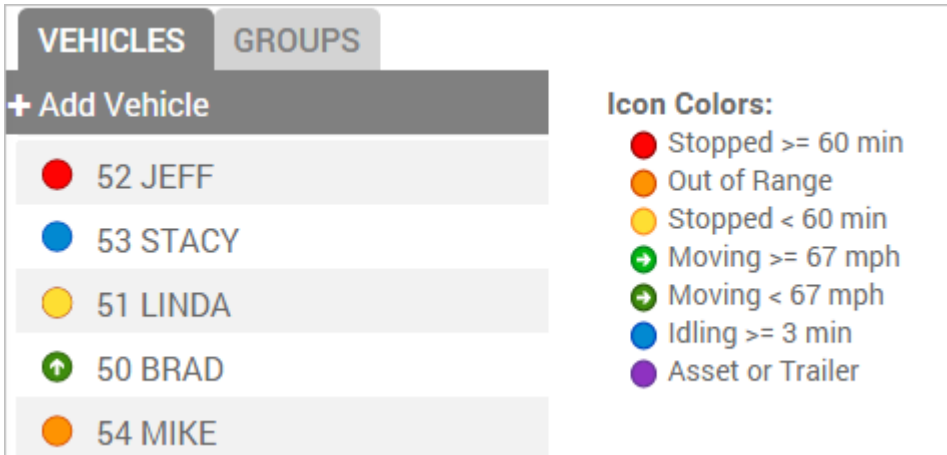

The screenshot shows the 'VEHICLES' tab selected. Below the tab is a '+ Add Vehicle' button. A list of vehicles is displayed with colored circular icons next to their names: 52 JEFF (red), 53 STACY (blue), 51 LINDA (yellow), 50 BRAD (green with an upward arrow), and 54 MIKE (orange). To the right of the list is an 'Icon Colors:' legend with corresponding colored circles and text: red for 'Stopped >= 60 min', orange for 'Out of Range', yellow for 'Stopped < 60 min', green with an upward arrow for 'Moving >= 67 mph', green with a right arrow for 'Moving < 67 mph', blue for 'Idling >= 3 min', and purple for 'Asset or Trailer'.

When you click on a vehicle from the list or when you click on a vehicle from the map, the **Vehicle Card** appears, which shows you the duration of vehicle status, last reported time of ignition status, address and geocode of last reported location, and current odometer reading (GPS odometer). Additional menu items are also available for the selected vehicle.

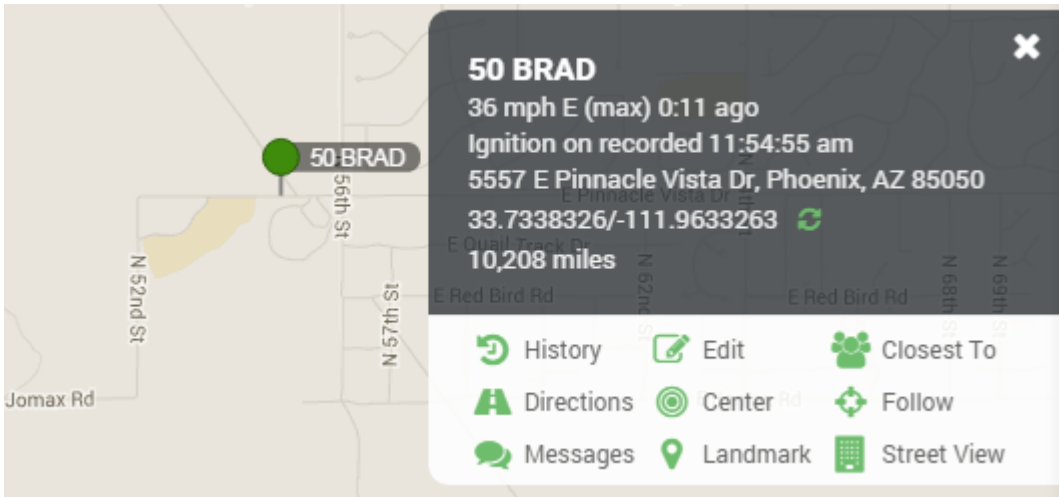


The screenshot shows a map with a green pin for vehicle 50 BRAD. A 'Vehicle Card' is overlaid on the map. The card contains the following information: '50 BRAD', '36 mph E (max) 0:11 ago', 'Ignition on recorded 11:54:55 am', '5557 E Pinnacle Vista Dr, Phoenix, AZ 85050', '33.7338326/-111.9633263' with a refresh icon, and '10,208 miles'. Below the information is a menu with icons and labels: History, Edit, Closest To, Directions, Center, Follow, Messages, Landmark, and Street View.




Note. "Help! Why can't I see my vehicles on the map?" Ensure the **map filters** are turned off (i.e., show ALL VEHICLES).


All of your registered vehicles and/or assets are visible on **maps** and **dashlets**. Vehicles are color-coded according to their current status (i.e., moving, idling, stopped).

Link: <https://help.nuvo.solutions/docs/about-vehicles/> Last Updated: February 7th, 2019

| Legend: Colors | |
|---|------------------------|
|  | Stopped >= 60 min |
|  | Out of Range |
|  | Stopped < 60 min |
|  | Moving >= 67 mph |
|  | Moving < 67 mph |
|  | Idling >= 3 min |
|  | Asset or Trailer |
|  | Out of Range > 30 days |
|  | Service Reminder |




Note. The thresholds shown in the legend are customizable. Click the User Preferences icon () on the dashboard to set thresholds for Speed (mph), Idle Time (minutes) Stop Time (minutes), and Out of Range (minutes).

Icon shapes are also customizable. Instead of using a circle () , you can assign different **icon shapes** to different vehicles to get an immediate visual indicator for the vehicle type.

In dashlets and drop-downs, vehicles are listed alphabetically (by vehicle label). When you click on a vehicle from a list or from a map, the **Vehicle Card** appears, which shows you the duration of vehicle status, last reported time of ignition status, address and geocode of last reported location, and more.

Link: <https://help.nuvo.solutions/docs/about-vehicles/> Last Updated: February 7th, 2019

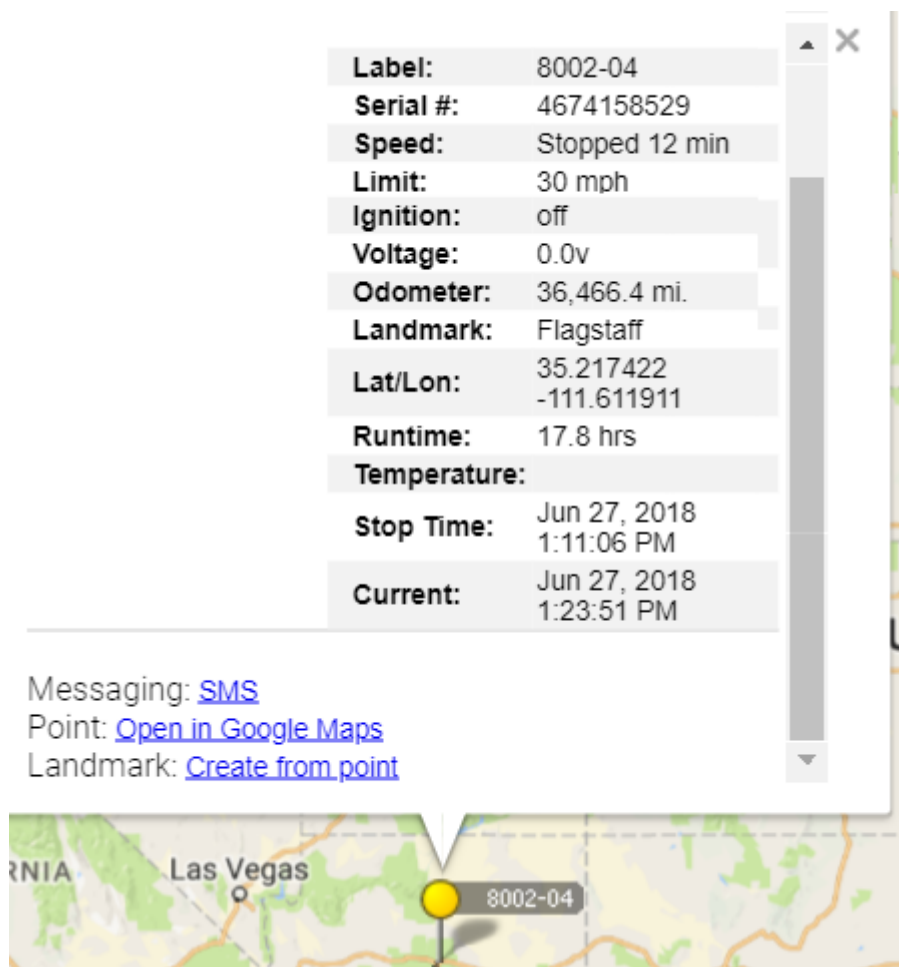

| | |
|---------------------|----------------------------|
| Label: | 8002-04 |
| Serial #: | 4674158529 |
| Speed: | Stopped 12 min |
| Limit: | 30 mph |
| Ignition: | off |
| Voltage: | 0.0v |
| Odometer: | 36,466.4 mi. |
| Landmark: | Flagstaff |
| Lat/Lon: | 35.217422 -111.611911 |
| Runtime: | 17.8 hrs |
| Temperature: | |
| Stop Time: | Jun 27, 2018 1:11:06 PM |
| Current: | Jun 27, 2018 1:23:51 PM |

Messaging: [SMS](#)
Point: [Open in Google Maps](#)
Landmark: [Create from point](#)



Note. The information on the Vehicle Card varies depending on the **map type** and the features available to your account.

The Vehicle Management page also allows you to register new devices, edit vehicle properties, assign vehicle groups, and more.



Note. In order to manage vehicles, you must have the Vehicle Admin permission enabled in the **User Access List**.

